

weemote X



SET-UP GUIDE

for product codes R11 and later



Patent #D451,905
weemote® is a registered trademark

Welcome!

The weemote® Set-Up Guide is designed to help you get your weemote® working as quickly as possible. **Please follow the step-by-step sections in this guide**, in the order presented, and you will be surprised at how easy programming your weemote® can be.

For most people who have a simple cable-ready TV or Set-Top device such as a Cable Box or Satellite Receiver, these will be the only instructions you will need.

Since the weemote® is configurable for a great variety of home entertainment systems, there are other setup options beyond the scope of this guide. For help, please visit us online at <http://support.weemote.com>. Our support site features Frequently Asked Questions, user forums, applications guides, video tutorials and the best way to contact us quickly if you need extra help. When contacting us, be sure to include the product code version of your weemote®. Your weemote's product code can be found on the inside of the battery door—see page 4.

We welcome your feedback on anything and everything weemote®. That includes this Set-Up guide.

If you found a unique way to use the weemote®, please let us know so we can share it with the rest of the weemote® community. Send your comments to info@fobis.com or call us at 305-253-8387.

Take a moment to register your weemote® now, so we can inform you of other cool gadgets we are working on. You can register online at www.weemote.com.

Enjoy your weemote®.

STEP 1
Getting Started **4**
SET-UP Considerations - PLEASE READ BEFORE YOU BEGIN **5**

STEP 2: **6**
Setting up your TV

STEP 3: **8**
Setting up your Set-Top device (Cable Box or Sat. Receiver)

STEP 4: **10**
Entering your favorite channels

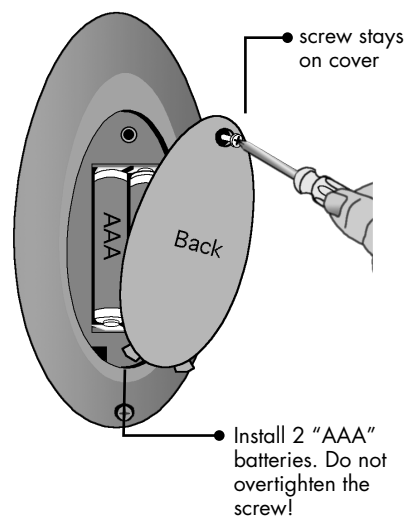
LEARNING THE "DASH" SIGNAL **12**
When using HDTV Tuners

FINAL TWEAKS **14**
Set-Top powering, favorite channel changing, turning mute or volume off, channel up/down options, home theater options, learning special buttons from your existing remote, device code recall

FACTORY RESET **17**

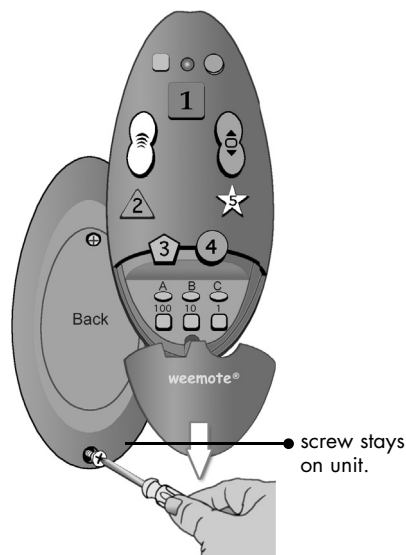
DEVICE CODES **18-22**
Find your device codes on these pages

A. INSTALL THE BATTERIES



- You must use a small Philips screwdriver to remove the the battery cover. Using a large screwdriver will strip the screws.
- Note that on the inside of the battery door is a product sticker with your product code version. When contacting us, always refer to this product code.
- It is normal after installing the batteries that none of the buttons will activate the weemote® LED light until you start programming it.

B. REMOVE THE SETUP COVER



- You must use a small Philips screwdriver to remove the the battery cover. Using a large screwdriver will strip the screws.
- After fully loosening the screw, turn the unit around and apply downward pressure on the setup cover, just below the Favorite #3 and Favorite #4 buttons. **Do not use a screwdriver to wedge the cover open!**
- Take care not to over tighten the screws when you put the covers back on.

C. SET-UP CONSIDERATIONS - IMPORTANT

The weemote® X is designed to provide basic and advanced functionality in a wide variety of entertainment systems. Please carefully review this entire section before you begin to determine which steps to follow in this guide for your particular needs.

A. If you only have a TV (not using a Set-Top device such as a cable or satellite box) and do not need to program favorite channels at this time, proceed to Step 2. If you want to program your favorite channels, after completing Step 2, proceed to Step 4.

B. If you have both a TV and Set-Top device, which can be a Cable Box, Satellite Receiver or a DVR, and do not want to program favorite channels, then proceed to Step 2 to setup your TV, then Step 3 to setup your Set-Top device. If you want to program your favorite channels, after completing Step 2 and 3, proceed to Step 4.

C. Be sure to review the "Final Tweaks" section in this guide after you finish your basic set-up for any final adjustments you may need to make.

D. For more complex set-ups such as using a Home Theater device, or adding special custom controls from your existing remotes, you should still use this setup guide for your basic setup. However, to add these additional functions, you will also need to download our Learning Guide, which can be found online at <http://support.weemote.com> to complete your setup.

E. If you have a TV Combo Device, such as a TV with a built-in DVD player, please use the Learning Guide found online at <http://support.weemote.com> to setup your weemote® X.

F. Some Set-Top devices use RF based remote control (Radio Frequency). If your Set-Top device uses RF remote control, it will not work with the weemote® X. Check with your cable or satellite provider to see if your Set-Top device can also be set for IR (Infrared Remote Control), which the weemote® X does support.

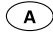 
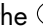 

BEFORE YOU BEGIN


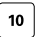 

If you are using a combo TV/VCR, TV/DVD or TV/VCR/DVD device, then we recommend you download the Learning Guide available at <http://support.weemote.com> to setup your weemote® X.

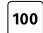 
A. Turn your TV on.

B. Locate your code using the TV codes listed at the end of this guide. If you cannot find or locate a working code, check for a complete searchable list of all available codes at to www.weemote.com/codesearch. If you still can't find a working code, then you will need to search for your code using the directions on the following page.

C. Try the first code. Locate the first code listed for your brand and TV type. For this example, we will use the code 103.







C1. Press and hold down the  button until the LED light turns on solid green , then release the  button.

C2. Enter the code number using the , , and  buttons. For this example, we'll enter code **103**. The LED light will blink green each time you press and release the button.

 Press & release the 100 button one time.

(Your weemote will fill in the zero for you here.)

   Press and release the 1 button three times.

C3. Now, press and release the POWER button . If the TV turns off, then press and release the POWER button again . If the TV turns on, then you have the correct code. If this is the case, go ahead and press and release the  button. The LED light will blink three times    and then turn off.

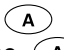 
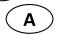 
If the POWER button does not respond correctly in this step, then go back and repeat steps C2 and C3 above, trying the next code listed for your brand. If you have tried all the codes listed for your brand and you still cannot find a code to turn your TV on and off, then you will need to proceed with searching for your code as described on the next page.

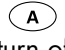 



D. Test your code. After you have found a code and have entered it into the weemote® X, try turning your TV on with the weemote® and also try the volume up/dn and mute controls. If you don't plan to use a Set-Top device, then you should also check the channel up/dn controls as well. If all the functions work as expected, then you are done with this step and are ready to move on to the next steps if needed. If all the needed functions are not working, then you will need to go back to Step B on the previous page and try another code. If you still can't find a working code, then you will need to search for one as described below.

SEARCHING FOR YOUR TV CODE

A. Turn your TV on.

B. Search for your code.

B1. Press and hold down the  button until the LED light turns on solid green, then release the  button.

B2. While pointing the weemote® at your TV, press and release the upper half of the Volume (Up) button about every .5 seconds. As soon as the device turns off, press and release the  button. The LED light will blink three times    and then turn off.

C. Test your code.

C1. Try the power, volume and channel up/down buttons. If these buttons function properly, then you have found a matching code and can now continue to the next step. If you are also setting up a Set-Top device like a cable box or satellite receiver, then testing the channel up/down controls is not necessary. If some of these functions do not work, please go back to B1 above to resume your code search. Please note that there are over 150 codes so be patient when searching for another potential match.

C2. If you do not find a matching code, you will need to use the weemote's learning feature to setup your weemote®. The Learning Guide is available online at <http://support.weemote.com>.

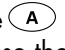 
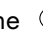 

BEFORE YOU BEGIN

If you are not using a Cable Box, DVR or Satellite Receiver, skip this step and go to Step 4 on page 10 to program your favorite channels.




A. Turn on your set-top (cable box, satellite receiver or digital video recorder (DVR or TiVo). If you have a separate set-top box with your DVR, program the unit you use for viewing live TV.

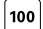 
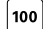 
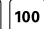 
B. Locate your code. Refer to the CABLE, SATELLITE, IPTV, DVR and DTV codes at the end of this guide. If you cannot find or locate a working code, check for a complete searchable list of all available codes by going to www.weemote.com/codesearch. If you still cannot find a working code, then you will need to search for your code as described on the next page.


C. Try the first code. Locate the first code listed for your brand and Set-top type. For this example, we will use the code 312. The LED light will blink green each time you press and release a button.

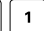 
C1. Press and hold down the  button until the LED light turns on solid green , then release the  button.





C2. Press and release the MUTE  button. The light will blink once green  and stay on solid.

C3. Enter the Code number using the , , and  buttons. For this example, we'll enter code **312**.

   Press and release the 100 button three times.

 Press and release the 10 button one time.

  Press and release the 1 button two times.

C4. Press and release the  button to lock in the code. The LED light will blink three times    and then turn off.

D. Test the code. With your set-top device on, try the channel up/down control. If the set-top device responds, then you have the correct code and can now go on to Step 4 to program favorite channels. If the set-top does not respond, then you will need to repeat C1-C4 in this section to try the next code.

STEP 3: SETTING UP YOUR SET-TOP

If you have tried all the codes, then you will need to search for your set-top code which is covered in the next section.




SEARCHING FOR YOUR SET-TOP CODE

A. Turn your Set-Top device on. Make sure it is displaying a live channel on your TV.

B. Search for your code.

B1. Press and hold down the **(A)** button until the LED light turns on solid green, then release the **(A)** button.

B2. Press and release the MUTE  button. The LED will blink and then turn on solid green.

B3. While pointing the weemote® at your Set-Top device you are searching, press and release the upper half of the Channel (Up) button about every .5 seconds. As soon as your set-top device changes channels, press and release the **(A)** button. The LED light will blink three times    and then turn off.

C. Test your code.

A. Try operating the channel up/down button. If the channel up/down button functions properly in both directions, then you have found a matching code and can now continue to the Step 4 to program your favorite channels. If the channel up/down button is not working properly, then you will need to repeat B1-B3 in this section to try and locate another matching code. Please be patient as there are about 100 set-top codes to scan.

B. If you do not find a matching code, you will need to use the weemote's learning feature to setup your weemote®. The Learning Guide is available online at <http://support.weemote.com>.


STEP 4: ENTERING FAVORITE CHANNELS

BEFORE YOU BEGIN

If you don't want to program favorite channels, you are finished! If you are using an HDTV and use dashes with your channel selection, i.e. channel 10-3, 25-12, then you will need to learn the dash signal if the TV code you are using is below 300. Learning the dash signal can be completed after this step.

PROGRAM FAVORITE CHANNELS 1-5



A. Enter programming mode. Press and hold down the **(C)** button for about three seconds or until the LED light turns on solid green , then release the **(C)** button.

B. Review the buttons needed to enter in your favorite channels:

(A) to enter in **thousands**


100 to enter in **hundreds**

10 to enter in **tens**

1 to enter in **ones**

(B) to enter the **dash or period** signal

C. Program a favorite channel button. For this example, we will start by programming favorite channel button **1**

C1. Press and release favorite channel button **1**. The LED light will turn off and back on again green .



C2. Enter in the channel you wish to program. For this example, we'll use channel **10-3**. The LED light will blink green after each button you press.

10 Press and release the 10 button one time.

(Your weemote will fill in the zero for you here.)

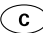 



(B) Press and release the B button to enter the dash/period.

1 1 1 Press and release the 1 button three times.

C3. Press and release favorite channel button **1** again. The LED light will blink twice   and turn solid green.

D. Proceed with entering other favorite channels by repeating C1-C3 in this section, adding the next favorite channel button. If you are only entering one favorite channel or have now entered all your favorite chan-

STEP 4: ENTERING FAVORITE CHANNELS

nels 1-5, you can press and release the  button to exit programming mode. The LED light will blink three times green    and go out.





E. Test Your Favorite Channels. At this point, if you press the favorite channel buttons you have programmed, the LED light should light up brightly. If it is dim, the button is not programmed.

F. More Favorite Channels (6-10). If you want to add more favorite channels, please proceed to the next section otherwise, go on to the next step called "Learning Dash" if applicable to your setup.

PROGRAM FAVORITE CHANNELS 6-10



BEFORE YOU BEGIN

When programming favorite channels 6-10, the channel up/down button on the weemote® automatically switches from going to all channels to just favorite channels 1-10. Favorite channels 6-10 are only accessible on the channel up/down button.

A. Enter programming mode. Press and hold down the  button for about three seconds or until the LED light turns on solid green, then release the  button. Next, press and release the MUTE  button. The LED light will turn off and back on again green .

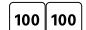 

B. Program a favorite channel. For this example, we will start by programming favorite channel 6. Please note the table below on how to add channels 6-10.

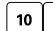 
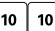 
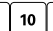 
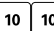 
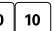 

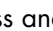 
weemote® Button	Favorite Channel Number
Press and release Favorite 1	Enters favorite channel 6
Press and release Favorite 2	Enters favorite channel 7
Press and release Favorite 3	Enters favorite channel 8
Press and release Favorite 4	Enters favorite channel 9
Press and release Favorite 5	Enters favorite channel 10

C1. Press and release favorite channel button . The LED light will turn off and back on again green .

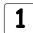 
C2. Enter in the channel you wish to program. For this example, we'll use channel **273**. The LED light will blink green after each time you press and release a button.





STEP 4: ENTERING FAVORITE CHANNELS

  Press and release the 100 button two times.

       Press and release the 10 button seven times.

   Press and release the 1 button three times.

C3. Press and release favorite channel button  again. The LED light will turn off and back on twice again green.

B. Proceed with entering other favorite channels by repeating C1-C3 in this section, adding the next favorite channel button. Please refer to the chart above C1 on how to enter favorite channels 7-10. If you are only entering one favorite channel or have now entered all your favorite channels 6-10, you can press and release the  button to exit programming mode. The LED light will blink three times green    and go out.

LEARNING THE DASH SIGNAL

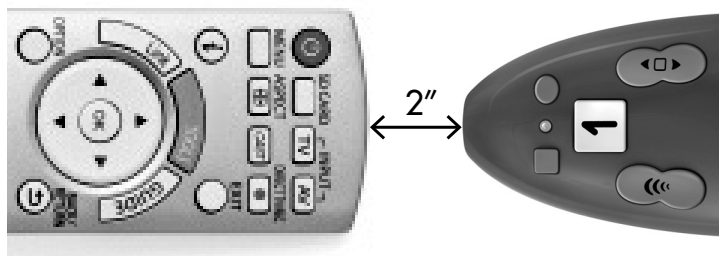
BEFORE YOU BEGIN

If you are using an HDTV tuner and use a dash or period button to make your channel selections with your current remote, for example channel 10-3 or 25-12, and the TV code you are using is below 300, you will need to complete this section. If this does not apply to you, then proceed to the Final Tweaks section for any final adjustments you may need to make.

You will use the learning mode of the weemote® X to add the dash signal. If you are not familiar with how learning works, we encourage you to visit <http://support.weemote.com> for helpful tips and video tutorials.

Depending upon your existing remote, you will either have a button that has a dash symbol "-" or a period symbol ".".

1. Line up remotes. Take the existing remote you use to change channels and the weemote®, and point them so they are facing directly at each other. Leave about 2 inches of space between them.



2. Enter Learning Mode.

- A.** Press and hold down the **(B)** button until the LED light turns on solid green, then release the **(B)** button.
- B.** Press and release the small number **[1]** button in the program area. The light will blink once ☹️.
- C.** Press and release the favorite number **[1]** button. The light will blink from green to orange indicating you are now in learning mode.
- D.** Press and release the "dash" or "period" button on your existing remote. The light will blink orange twice ☹️ ☹️ and then back on solid orange. If the light turns red then you need to repeat this step. If you still have trouble, try changing the spacing to about an inch and make sure you not near florescent lighting. Also make sure the front of the remotes are pointing directly at each other and that there is no angle at the front of the remote.
- E.** Press and release the "dash" or "period" button on your existing remote for a second time. The light will blink orange three times ☹️ ☹️ ☹️ and then turn on solid green. At this point, the weemote® has now learned the "dash" signal.
- F.** Press and release the **(B)** button to exit the programming mode. The light will blink three times ☹️ ☹️ ☹️ and go out.

BEFORE YOU BEGIN

Review this section for any final adjustments you might want to make after your basic set-up.

SET-TOP POWERING

When using set-top devices that support being turned off, the weemote® normally turns the power on and off to both your TV and set-top device. From experience, we have found that in many cases it can be more reliable to keep the set-top device on all the time. This avoids the chance that the power cycle does not go out of sync, for example, the TV stays on but the set-top goes off or visa versa. If you find that the weemote® is currently turning your set-top device off, here is how you can set this option to keep the weemote® from sending power signals to your set-top device.

- A.** Press and hold down the "C" button for about 3 seconds until the LED light turns on solid green. Then, release the button.
- B.** Press and release the "POWER" button. The LED light will blink and turn on solid green.
- C.** Press and release the "favorite channel 1" button. The LED light should blink three times and go out to confirm the option has been set.

FAVORITE CHANNEL CHANGING

Review this section if you have programmed favorite channels into your weemote® X.

Some TV's and Set-Top devices may require additional changes to the weemote® X to optimize the speed of changing favorite channels. There are also cases with some Set-Top devices where the weemote® needs to send more leading zeros for the changing of channels below 100 or 10.

The options available are whether the weemote® X should send an "Enter" or "Select" signal after pressing a favorite channel button. The other choices are whether the weemote® should add 1 or 2 leading zero's to favorite channels programmed below 10.

The best way to determine if you need to make any changes to the weemote® X is to use your existing remote and experiment testing whether any of these cases may apply in your particular environment.

FINAL TWEAKS

1. Press and hold down the “C” button for about 3 seconds until the LED light turns on solid green. Then, release the button.
2. Press and release the “A” button. The LED light will blink and turn on solid green. After entering one of the options below, the weemote® X LED light will blink three times green and go out to confirm your setting was entered.

2A. To insert the enter signal, press and release the favorite #1 button.

2B. To insert the select signal, press and release the favorite #2 button.

2C. To insert one leading zero, press and release the favorite #3 button. For example, channel 7 will be sent as 007.

2D. To insert two leading zeros, press and release the favorite #4 button. For example, channel 7 will be sent as 0007.

2E. To clear all settings, press and release the favorite #5 button.

TURNING THE MUTE OR VOLUME CONTROL OFF

To turn off the MUTE control.

- A. Press and hold down the “C” button for about 3 seconds until the LED light turns on solid green. Then, release the button.
- B. Press and release the “MUTE” button. The LED light will blink and turn on solid green.
- C. Press and release the “MUTE” button a second time. The LED light should blink three times green and go out to confirm the option has been set. If the LED light blinks three times red in this step, the MUTE control has been turned back on from being sent previously to off.

To turn off the Volume control.

- A. Press and hold down the “C” button for about 3 seconds until the LED light turns on solid green. Then, release the button.

FINAL TWEAKS

- B. Press and release the “MUTE” button. The LED light will blink and turn on solid green.
- C. Press and release the bottom portion of the Volume button (Down). The LED light should blink three times green and go out to confirm the option has been set. If the LED light blinks three times red in this step, the Volume control has been turned back on from being sent previously to off.

SETTING THE CHANNEL UP/DN BUTTON

The Channel Up/Dn control on the weemote® X is normally set to go to all channels just like a standard remote control. However, if you programmed favorite channels 6-10, the Channel Up/Dn control automatically switches to only scanning your programmed favorite channels. There is a 3rd mode you can set which is to completely disable this button. Here is how you can change these available options.

- A. Press and hold down the “C” button for about 3 seconds until the LED light turns on solid green. Then, release the button.
- B. Press and release the “MUTE” button. The LED light will blink and turn on solid green. After entering one of the options below, the weemote® X LED light will blink three times green and go out to confirm your setting was entered.

B1. To only scan through favorite channels, press and release the bottom part of the channel button (Down).

B2. To go to all channels, press and release the top part of the channel button (Up).

B3. To turn this control off, press and release the favorite “A” button.

HOME THEATER OPTIONS

If you have a home theater device, chances are the audio signal for your entertainment system is controlled through that component. In this case, you can set the weemote® volume up/down and mute signals to work with your home theater system. This is done by learning those signals. Additionally, you can also learn the power signal for your Home Theater device and apply that to the weemote® X power button. Information on how to setup these features are outside the scope of this guide and can be found in our Learning Guide available online at <http://support.weemote.com>.

LEARNING BUTTONS FROM YOUR EXISTING REMOTE

There may be cases where you want to apply a specific remote control button from your existing remote to the weemote®. Some common examples are the sleep timer and video input control. The weemote® allows you to learn buttons from your existing remote and apply them to any of the Favorite Channel #1-#5 buttons or the mute button. Information on how to setup these features are outside the scope of this guide and can be found in our Learning Guide available online at <http://support.weemote.com>.

RECALL YOUR CODE

In cases where you had to search to find your code, there is way to have the weemote® X provide you with the specific code number for future reference.

A. Press and hold down the “A” button for about 3 seconds until the LED light turns on solid green. Then, release the button.

A1. To recall your TV Code, press and release “A” button again for a second time.

A2. To recall your Set-Top Code, press and release the “MUTE” button, then press and release the “A” button.

B. The LED light will begin to blink a series of green flashes as follows:

- The first series of flashes will signify the hundreds value.
- The second series of flashes will signify the tens value.
- The third series of flashes will signify the ones value.
- If any series of the flashes are fast, this will signify a “0” value for that series.

FACTORY RESET

There may be cases when you need to completely reset your weemote® X. We highly recommended you do this whenever you decide to use it with another system or you are having difficulty with programming and need to start over.

1. Press and hold down both the “A” button and power button for about 3 seconds or until the LED light turns on orange and blinks three times and goes out.

BEFORE YOU BEGIN

If you don't see your code here, please check for a complete searchable list of all available codes by going to www.weemote.com/codesearch.

TV CODES

ADMIRAL	3	18	41	90	125	129	187
ADVENT	257	262					
AIWA	90	251					
AKAI	32	70	149	172			
APEX	12	15	95	201			
AUDIO DYNAMICS	238						
AUDIOVOX	24	41	120	170			
BELL	284						
BROKSONIC	5	23	28	172	174	176	219
DURABRAND	176	274	274	277			
GENERAL ELECTRIC	3	8	9	23	43	44	125 130
	143	147	165	170	172	182	183 195
	206	207	211	231	233	241	248
HIITACHI	5	18	23	26	48	49	50 51
	52	53	54	55	116	126	142 169
	172	185	224	225	231	241	251
ILO	294						
INSIGNIA	283	285	286				
JVC	57	58	59	60	186	234	234 235
	235	238	279				
LG	290						
MAGNAVOX	6	8	10	17	27	28	34 64
	65	66	67	68	110	132	150 151
	154	163	164	167	172	175	187 192
	194	200	224	225	231	236	237 231
	236	237	241	251	273	281	291 292
MITSUBISHI	4	5	23	28	70	71	72 122
	123	129	149	172	187	192	194 239
	240						
OLEVIA	300						
PANASONIC	8	9	10	11	66	73	151 165
	173	177	183	195	196	211	231 241
	242						
PHILIPS	5	10	27	63	66	68	146

TV CODES (CONTINUED)

BRAND	CODE(S)								
	151	163	164	220	223	225	236	237	251
RCA	3	5	8	14	48	78	79	80	
	82	84	85	86	87	125	127	130	
	134	149	172	182	183	210	231	233	
	241	251							
SAMSUNG	5	6	16	23	26	28	32	112	
	151	163	172	192	194	202	221	224	
	225	229	244	245	246	247	280	287	
	288	293	306	307	308	309			
SHARP	26	91	129	141	224	225	255		
SONY	109	119	122	189	200	200	232		
SYLVANIA	6	10	28	64	65	66	68	69	
	110	112	132	150	151	163	172	192	
	194	229	237	240	251	263	273	274	
	275	297							
TOSHIBA	16	17	47	74	90	96	118	131	
	180	201	202	240	247				
VIEWSONIC	261								
VIZIO	172	290	310						
WESTINGHOUSE	41	90	130	170	171	176	200	204	
	258	282							
WHITE WESTINGHOUSE	251								
ZENITH	1	18	24	40	178	219	223	235	
	248	251	264						

TV/DVD CODES

BRAND	CODE(S)			
BROKSONIC	278			
EMERSON	273			
HAIER	257			
INSIGNIA	283			
MAGNAVOX	34	273		
PHILIPS	63			
SAMSUNG	280			
SYLVANIA	69	273	274	275
TOSHIBA	74			

CABLE BOX CODES

BRAND	CODE(S)								
COMCAST DTA	308								
GENERAL INSTRUMENT	1	3	5	49	55	75	109	115	
	121	122	134	183	196	197	200	201	
	202	203	220	247	248	249	250	251	
	252	254							
MOTOROLA	1	3	5	49	55	75	109	115	
	121	122	134	183	196	197	200	201	
	202	203	220	247	248	249	250	251	
	252	254							
MOTOROLA MOXI	268								
PACE	11								
PIONEER	2	62	64	68	111				
SAMSUNG	23	270							
SAMSUNG	6	65							
SCIENTIFIC ATLANTA	3	66	67	68	68	69			
SCIENTIFIC ATLANTA	272								
SKYCABLE	129	129							
SONY	24								
TELUS	256								
ZENITH	5	118							

SATELLITE CODES

BRAND	CODE(S)							
DIRECTV	93	94	95	96	97	98	124	132
	151	257						
DISH NETWORK	100	101	119	271	271	303		
ECHOSTAR	113	119	137	150	204	205	206	207
	208	209						
EXPRESS VU	119							
GENERAL INSTRUMENT	1	3	5	49	55	75	121	122
	134	183	196	197	200	201	202	203
	220	247	248	249	250	251	252	254
HUGHES NETWORK	30	93	94	95	96	97	98	124
	132	267						
PHILIPS	16	117	126	176	273			
RCA	110	116	118	141	233			
SAMSUNG	108							
SHAW/STARCHOICE	309	310	311	312	313	314	315	316
SKY	274							
SONY	112	114						
TOSHIBA	133	134	174	187				
ZENITH	174							

IPTV CODES

BRAND	CODE(S)	
ADB3800	281	
AMINO	277	282
AT&T UVERSE	280	
CISCO	280	
ENTONE	301	
I3	269	
MOTOROLA	280	
SCIENTIFC ATLANTA	275	
SKYANGEL	302	
VERIZON	276	
VERIZON FOIS	1	
WOW CABLE	317	

DVR/TIVO CODES

BRAND	CODE(S)		
MOTOROLA	115		
TIVO	32	33	151
TIVO/PHILIPS	151		
TIVO/SONY	162		

DTV CODES

BRAND	CODE(S)	
APEX	305	
ARTEC	284	
CHANNEL MASTER	285	
COSHIP	286	
DIGITAL STREAM	287	
DISH	302	
GE	288	
GOODMIND	289	
INSIGNIA	290	
LASONIC	291	
MAGNAVOX	292	293
MICROGEM	294	
PHILCO	293	
RCA	295	
SANSONIC	296	
SKARDIN	297	
TIVAX	298	
ZENITH	290	
ZENTECH	297	

WARRANTY

Fobis Technologies Inc. ("FOBIS") warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for one year from the date of original purchase.

This warranty does not cover damage or failures caused by products or services not supplied by FOBIS, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, setup adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of GOD.

There are no express warranties except as listed above. FOBIS SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product during the warranty period, please contact us by using our support portal at support.weemote.com for the fastest response.

Fobis Technologies Inc.
(305) 253-8387
Email: info@fobis.com

CARE AND MAINTENANCE

1. Keep the weemote® dry. If it gets wet, wipe it dry immediately. Liquids may contain minerals that can corrode the case and electronics.
2. Use and store the weemote® only in normal temperature environments. Temperature extremes can shorten the life of the electronics, warp the plastic body and cause the batteries to leak.
3. Keep the weemote® away from excessive dust, dirt or sand. Exposure to these elements can cause the keypad to work erratically or fail altogether.
4. Even though the weemote® was designed to handle above average shocks, dropping the unit frequently can cause the case to crack as well as the internal electronics to malfunction.
5. Use only fresh batteries and take them out if you do not plan to use the weemote® for long periods of time. Batteries that leak can cause extensive damage to the weemote®.
6. Wipe the weemote® with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents as they may cause permanent damage to the weemote®'s finish.

Modifying or tampering with the weemote®'s internal components can cause malfunction and may invalidate your warranty. If your weemote® is not performing properly, please submit a trouble request by going to <http://support.weemote.com>.

